


Architrave-Free Door Installation Manual

Opening Preparation For Architrave-Free Doors

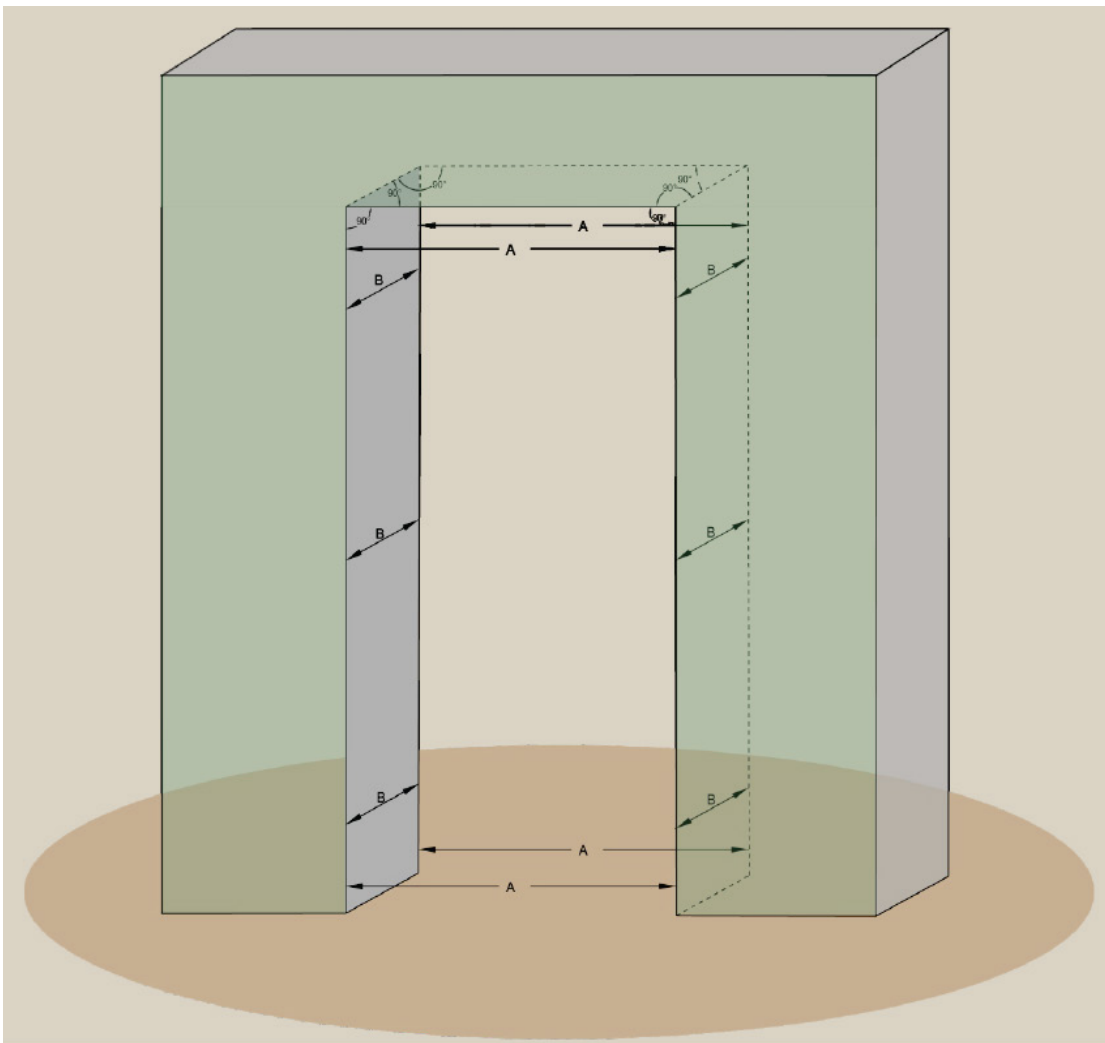

Markings:

A - opening width, allowable tolerance up to 1 mm

B - opening depth, allowable tolerance up to 1 mm

Important:

- The wall surface must be even, solid, and clean – without dust or crumbling plaster. Even small irregularities may become visible in the shadow gap.
- Before installation, it is necessary to check that all edges of the opening are perfectly vertical and horizontal.
- All corners of the opening must form a 90° angle.

Architrave-Free Door Installation Manual


Architrave-Free Door Complete Package Includes:

- Two frame legs
- One frame head
- Door leaf
- Two frame leg fixing boards
- One frame head fixing board
- Hinges

Before Installation


1. Measure the opening height and width.
2. Verify that the floor, wall, and ceiling surfaces are level.
3. Check all components and hardware before assembly.
4. Remove dust and debris from all contact surfaces.

Frame Installation

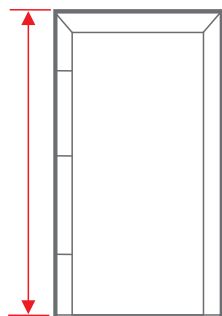

Frame Leg Fixing Boards

- Trim the boards to fit the wall studs according to the measured opening height.
- Maintain equal spacing along the full height.

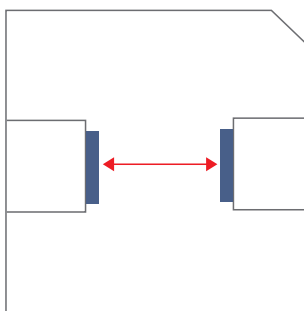


Frame Head Fixing Board

- Trim the board between the frame leg fixing boards according to the opening width minus the frame leg width.


Architrave-Free Door Installation Manual

Adhesive and Foam Application

- Fix the boards by applying High Tack adhesive between or foam the wall and board contact surfaces.
- Ensure the spacing is as shown in the drawing.

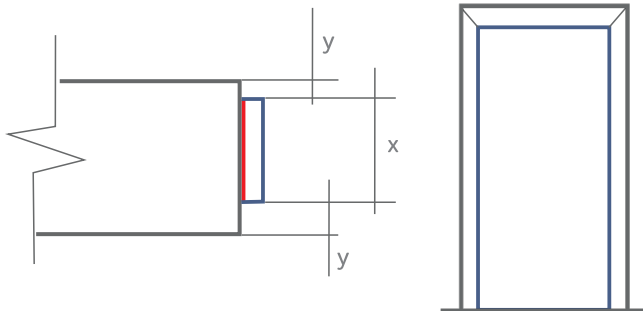

Architrave-Free Door Frame Assembly Sequence

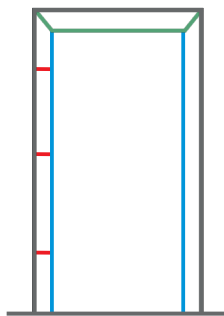


1. Secure the hinged-side frame part using screws through the hinge recesses (red).
2. Install the frame head (green) in the opening and ensure it is level.
3. Install the frame legs (blue).
4. Hang the door leaf onto the frame.

Alignment and Adjustment

Check the Frame Alignment


- Verify that the frame is plumb and level.
- Ensure all gaps are even and consistent.
- Check the straightness of the frame and door opening.
- If adjustment is required, insert spacer blocks (shims) between the fixing boards and the frame to achieve the correct alignment.

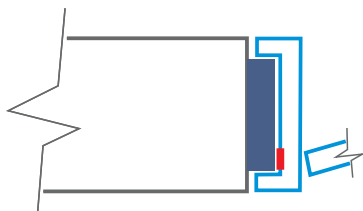

Architrave-Free Door Installation Manual

Floor Levelling

- If the floor is uneven, level the frame by placing suitable spacer blocks under the frame at the lowest point.
- The gap between the floor and the bottom of the frame must not exceed 2 mm.
- If the gap is greater than the permitted tolerance, the height of one side of the frame must be adjusted by trimming.

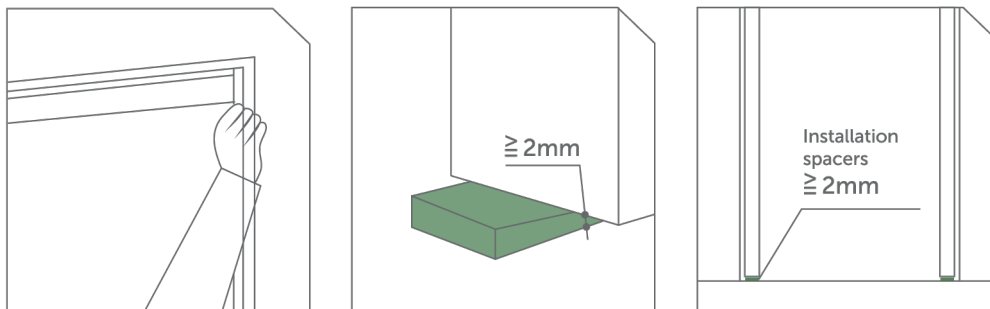

Final Fixing

After alignment has been confirmed, secure the frame using foam or High Tack adhesive. Ensure uniform distribution of the adhesive or foam.

